


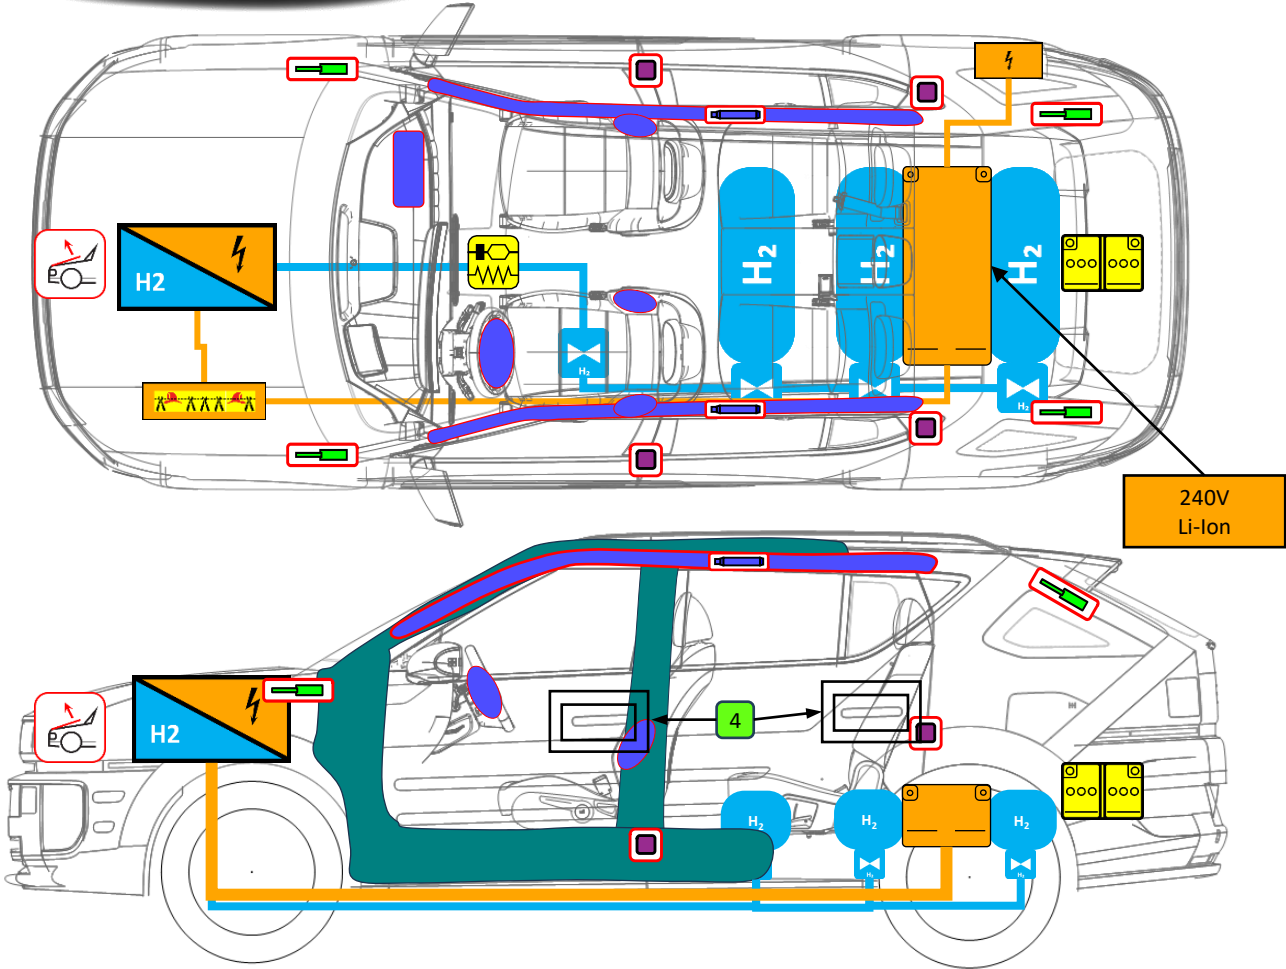


	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Battery low-voltage		Gas strut / Preloaded spring		High strength zone		Fuel cell component		Gas line (H ₂)
	Battery pack, high-voltage		High voltage power cable		High voltage component		Cable Cut		Gas tank with gas type indication (H ₂)
	Zone requiring special attention				Automatic hydrogen overpressure safety valve with gas type indication				

1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.

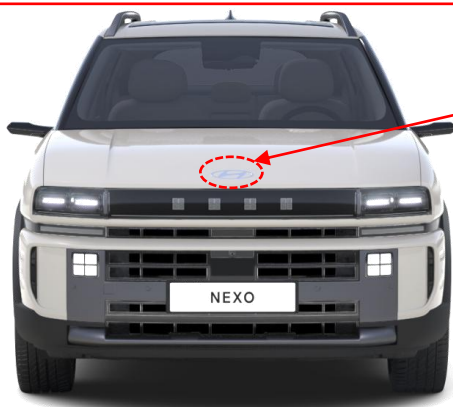


Brand Logo Name



Model name

NEXO

Charging door:

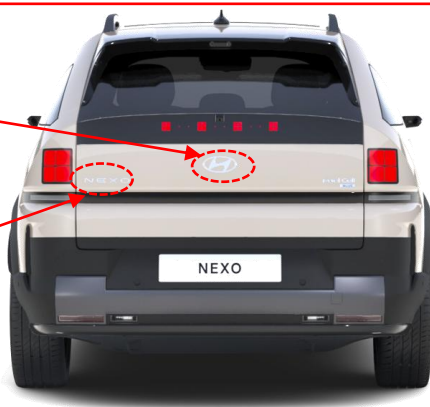

2. Immobilisation / stabilisation / lifting



Immobilisation:



- ① Chock the wheels and pull the electronic parking brake switch to set the parking brake.
- ② For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

Lifting points under the vehicle:

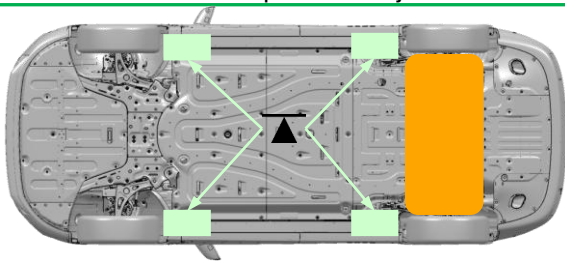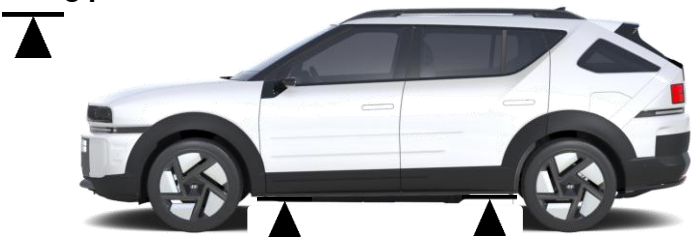

3. Disable direct hazards / safety regulations



IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW





Disabling High Voltage Battery:




- ① Pull the hood release lever (1) on the driver side.

- ② Go to the front of the vehicle. Push the secondary hood release lever (2) to the left.

Access to Service Interlock:

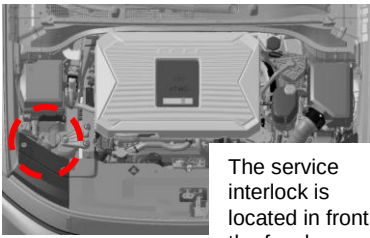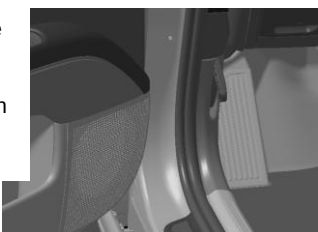

The service interlock is located in front of the fusebox, nearby the washer reservoir.


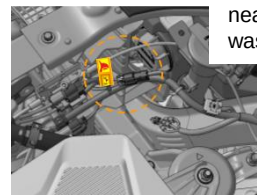


Disabling:




Cut the cable of the service interlock to disable the HV-System

 
Disabling 12V Battery:

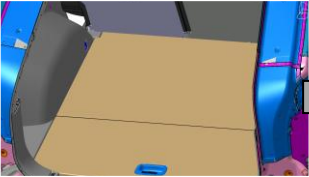

Remove the luggage board and luggage tray.

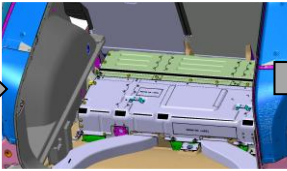

Remove the 12 V battery negative connector to the left of the battery system to disconnect power.


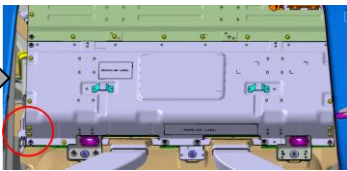


4. Access to the occupants




Glass:

 
- ① Laminated
- ②③ Tempered (OPT Laminated)
- ④ : Tempered

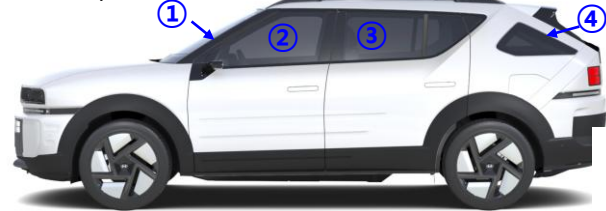

Front:

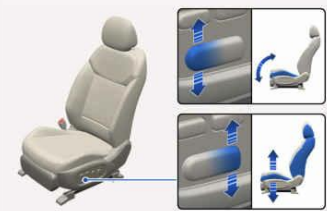


Rear:

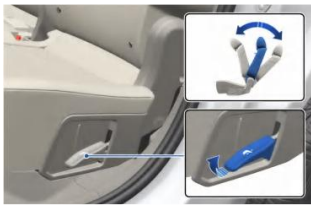

Vehicle body - Ultra-high Strength Steel



Remove the cover at the bottom of the boot, then slide the latch in the direction of the arrow to unlock the boot.

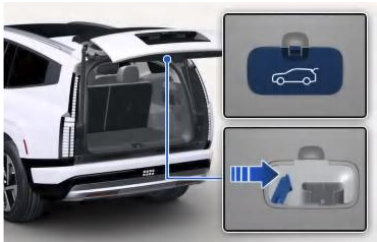

Door handles:

When the door outer handles doesn't pop-up, push the front side inwards.



Push




Pull

5. Stored energy / liquids / gases / solids

		12V	
LI ION		240V	R-1234yf 575g
H ₂		54.2l x3	



 WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA




6. In case of fire



Use large amount of water



 BATTERY RE-IGNITION!




Gas strut!




Risk of missile effect of hood and tailgate.



Safety valves in each tank open within minutes when fires spreading to the rear underbody

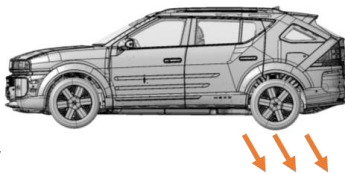

Hydrogen burns with an almost invisible flame

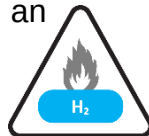

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

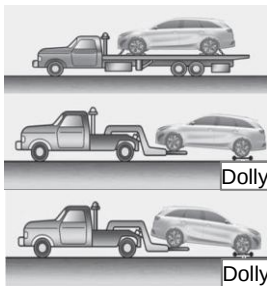

Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

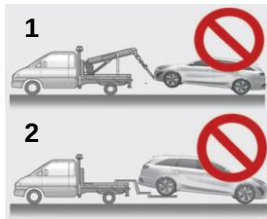

Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Hook

Location front hook Location rear hook



The hook located in the tool case in the tailgate

The hook must be used only temporary towing.
Store at safe distance from other vehicles

10. Explanation of pictograms used

	General warning sign		Warning, Electricity		Vehicle on Hydrogen Fuel Cell Electric Vehicle
	Air-conditioning component		Use thermal Infrared camera		Use water to extinguish the fire
	Acute toxicity		Corrosives		Environmental hazard
	Explosive		Flammable		Hazardous to the human health
	Bonnet		Boot		Pedestrian protection active system
	Hydrogen burns with an almost invisible flame		Lifting point; central support		Gas tank with gas type indication (H2)
	Steering wheel, tilt control		Seat height adjustment		Seat adjustment, longitudinal