


 
 






	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low-voltage		Gas strut / Preloaded spring		High strength zone		Low voltage device that disconnects high voltage
	Battery pack, high-voltage		High voltage power cable		High voltage component		Fuel tank

## 1. Identification / recognition



LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF: SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN.



Brand Logo Name



Model name



Fuel door



All Wheel Drive



## 2. Immobilisation / stabilisation / lifting



### Immobilisation:




- ① Chock the wheels and pull the electronic parking brake switch to set the parking brake.
- ② For automatic vehicles the shift button to the park(P) position.

For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects

### Lifting points under the vehicle:

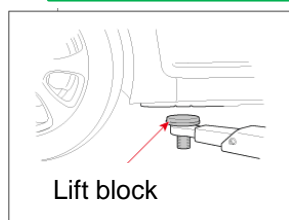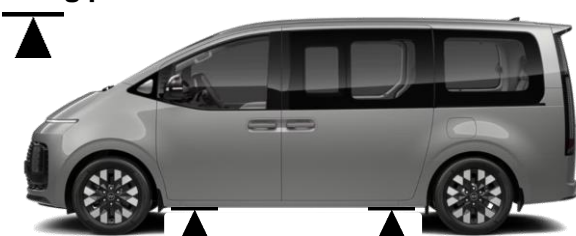

Front

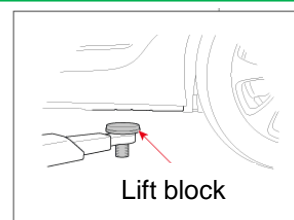

Rear

## 3. Disable direct hazards / safety regulations

IN CASE OF AN ACCIDENT, WHERE AIRBAGS AND SEATBELT PRETENSIONER WERE ACTIVATED, THE HV-SYSTEM SWITCH'S OFF AUTOMATICALLY. FOR ALL OTHER CASES USE THE DISABLING METHODS BELOW



### Disabling High Voltage Battery:



- ① Pull the hood release lever (1) on the driver side.

- ② Go to the front of the vehicle. Push the secondary hood release lever (2) to the left.

### Access to Service Interlock:



- ③ Open the cover with the firefighter helmet.




### Disabling:



"Service Interlock" is not completely removable.



Pull up the "Service Interlock"

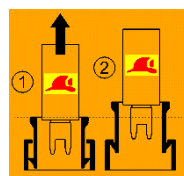


- ① HV connected
- ② HV disconnected




There is the capacitor inside the HPCU. Wait 5+ minutes for the capacitor to discharge after removing the service plug.

Disabling 12V

Battery:

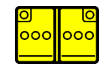


Turn the ignition switch off.  
Follow step ①-③ from disabling HV-method to get access to the 12V Battery

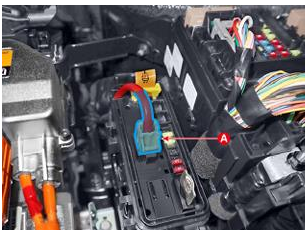

Remove the plug to disconnect low voltage

4. Access to the occupants

Steering column adjustment:

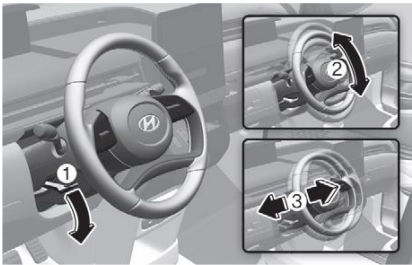

Seat adjustment:

MANUAL



POWER



Rear




Glass:

- ①: laminated
- ②: Tempered (opt. laminated)
- ③④⑤ : Tempered




Vehicle body - Ultra-high Strength Steel


Side

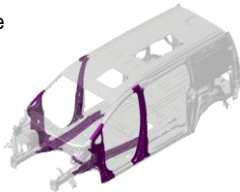

Bottom

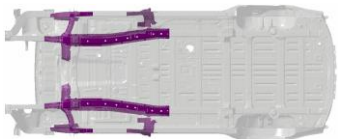

Boot:

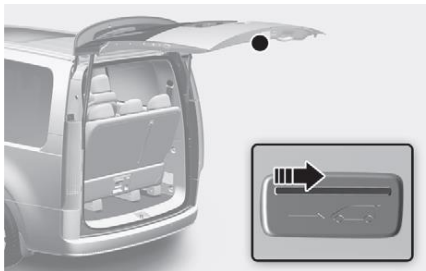

- 1. Insert a long, flat object, such as a screwdriver into the opening at the bottom of the tailgate.
- 2. Slide the latch (1) in the direction of the arrow to unlock the tailgate

5. Stored energy / liquids / gases / solids

		12V	
		270V	R-1234yf 850±25g
		65l	




WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA




6. In case of fire



Use large amount of water

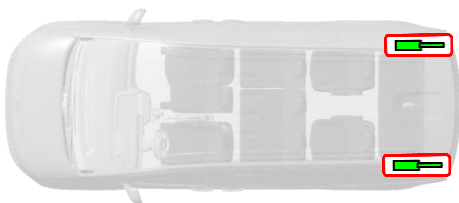

**BATTERY RE-IGNITION!**

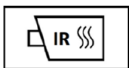

**Gas strut!**



Risk of missile effect of hood and tailgate.

7. In case of submersion




Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.




8. Towing / transportation / storage

OK

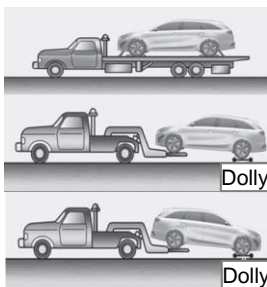


Notice: The use of wheel dollies or flatbed is recommended. Use a wheel lift or flatbed equipment.

Not OK

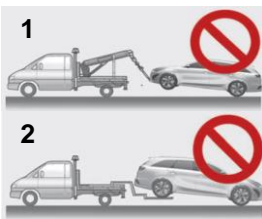

Notice : Do not tow with sling-type equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).

Towing hock

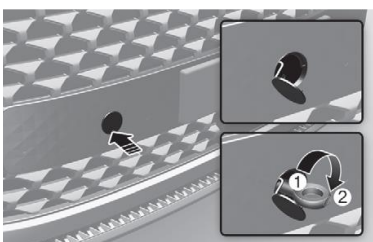

located in the tool case in the boot

The hook must be used only temporary towing.  
Store at safe distance from other vehicles

9. Important additional information

Different seat configurations are possible



10. Explanation of pictograms used

	Warning, Electricity		Fuel tank content gasoline / ethanol		Bonnet
	General warning sign		Air-conditioning component		Boot
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity		Environmental hazard
	Use thermal Infrared camera		Use water to extinguish the fire		
	Hybrid Electric Vehicle on fuel of liquid group 2				