





HYUNDAI TUCSON (48V optional)
SUV, 5 doors
As of October 2020

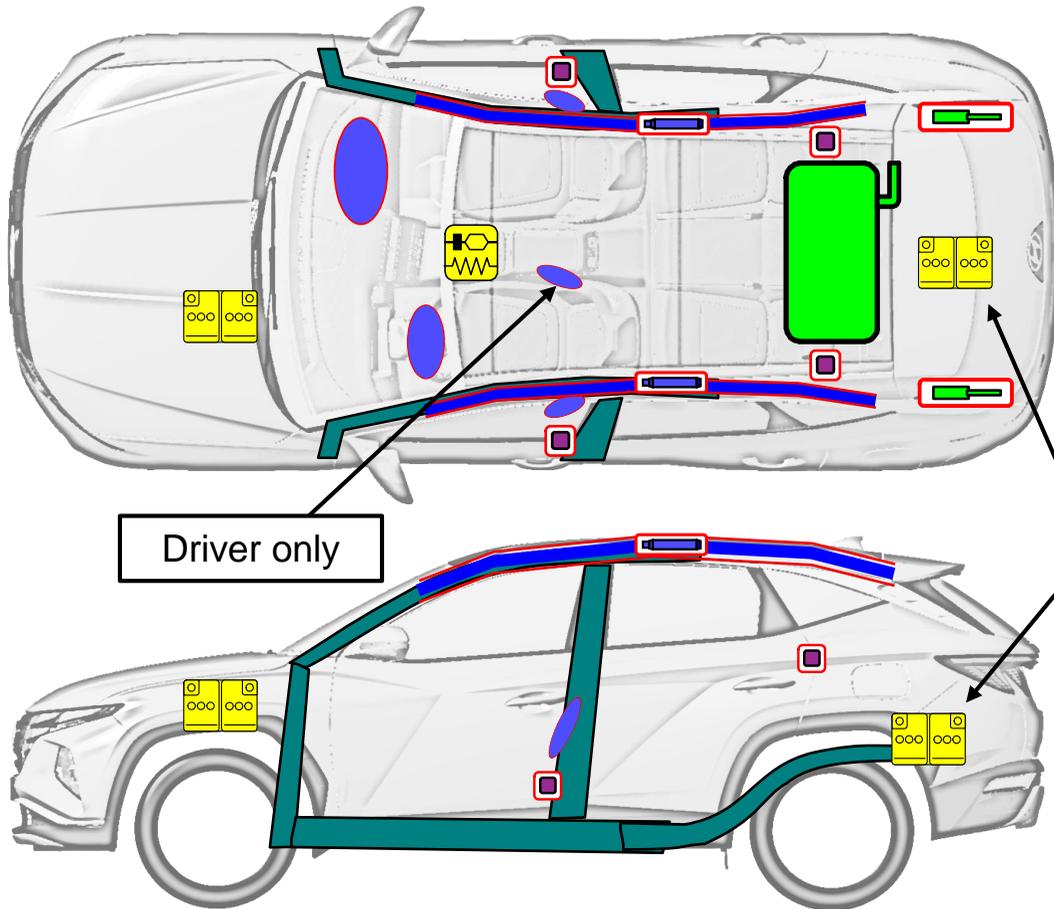

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage


	ID No.	Version No.	Version date	Page
	TMA-NX4-RSI-01-202107	01	07/2021	1 of 4

1. Identification / recognition

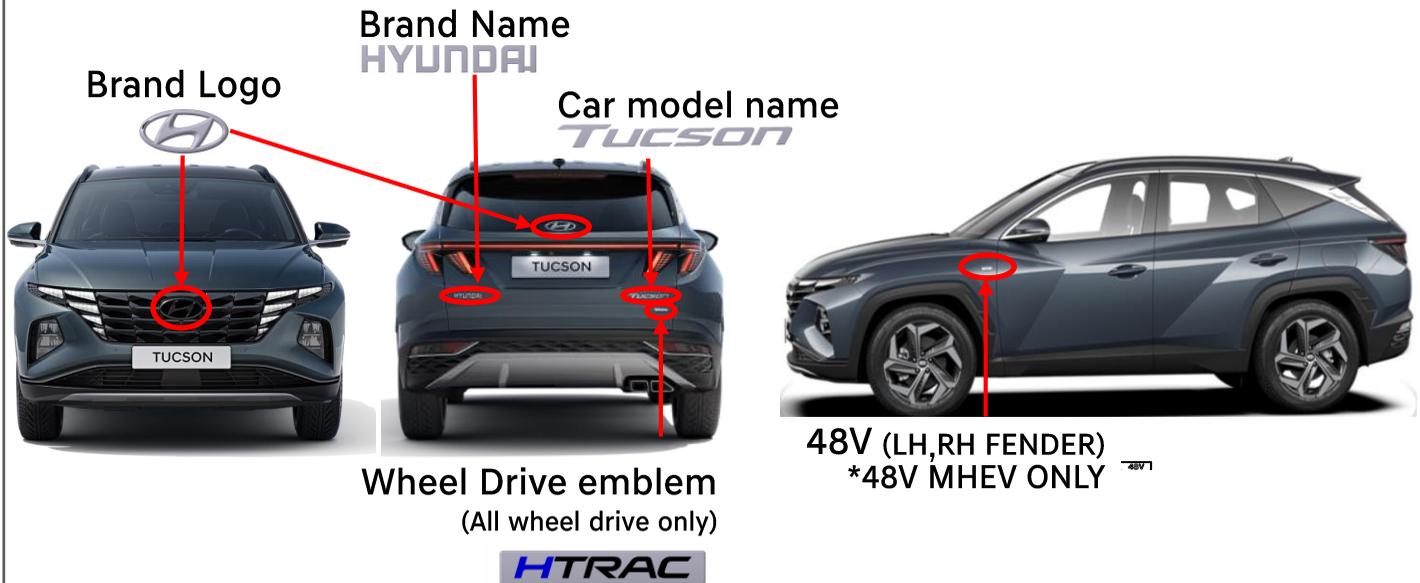

2. Immobilisation / stabilisation / lifting

■ Completely immobilize the vehicle

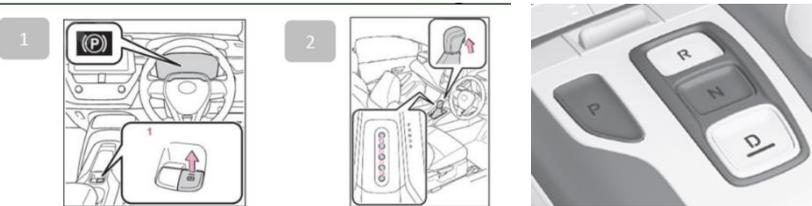

■ For stabilize vehicle, crib at four points directly under the front and rear pillars using wooden blocks or equivalent objects




Do not place cribbing such as wooden blocks or rescue air lifting bags under the exhaust system, fuel system or high voltage power cables. The failure will cause of fire, electric shock or gas leak.



ID No.	Version No.	Version date	Page
TMA-NX4-RSI-01-202107	01	07/2021	2 of 4

3. Disable direct hazards / safety regulations

■ Access to the 12V battery

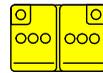

12V

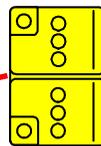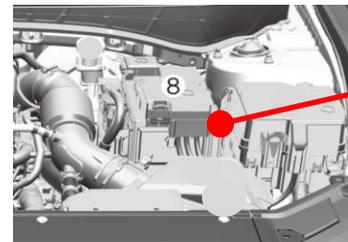


12V

1. Pull the release lever to unlatch the hood. The hood should pop open slightly.

2. Raise the hood slightly, push the secondary latch up (①) inside of the hood center and lift the hood (②)

3. Battery(⑧) in the engine room

■ Disabling procedure

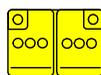

12V

① Turn the ignition switch off




② Disconnect the negative(-) terminal




③ Disconnect the positive(+) terminal

■ Access to the 48V battery

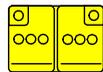

48V

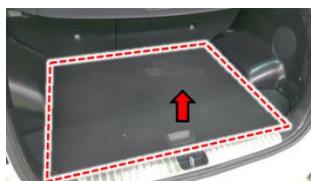


After opening the trunk, remove the luggage cover

After opening the luggage cover board remove luggage foam.

There is inlet/outlet duct and 48V battery system.

■ Disabling procedure

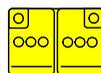

48V

· Location: in the trunk

· To disconnect 48V battery, follow steps:



- ① Wait about 10 minutes after you turn off the engine.
- ② Disconnect the (-) cable from 12V battery in the hood.
- ③ Disconnect the 12V (+) cable from 48V Battery pack.
- ④ Disconnect the 48V (-) cable and (+) cable in order.
- ⑤ Disconnect the BMS EXTN wire.

4. Access to the occupants

■ Glass



1 : Laminated

2-5 : Tempered

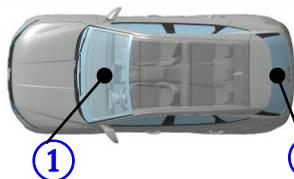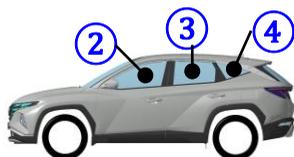

■ Vehicle body

Hardened Steel

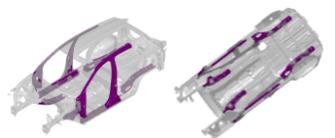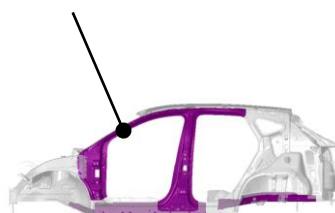

■ Seat adjustment




MANUAL



POWER

■ Steering column adjustment

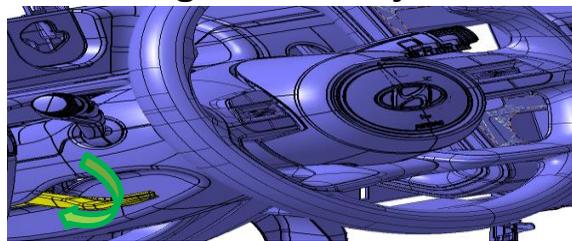

ID No.

TMA-NX4-RSI-01-202107

Version No.

01

Version date

07/2021

Page

3 of 4


5. Stored energy / liquids / gases / solids

 		max. 54L
		12 V
 LI ION		48 V

6. In case of fire

■ Gas Strut

- Risk of missile effect of hood and trunk.

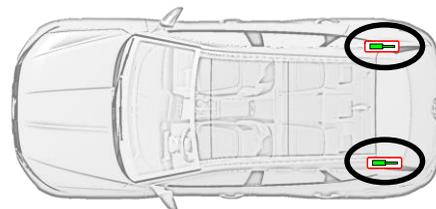

It is recommended to allow the 48V Li-ion battery to burn itself out if it is judged that it is difficult to apply copious amounts of water to the high voltage battery. In this case, protection of the environment from smoke must be managed.


7. In case of fire



Do not touch any of the 48V components or cables, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.

8. Towing / transportation / storage

OK :

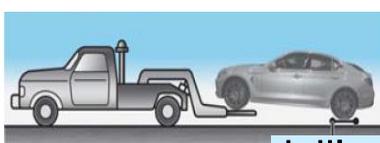


dollies



dollies

Notice: AWD (All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using dollies.

Not OK :

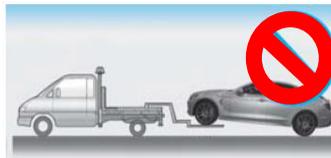

	ID No.	Version No.	Version date	Page
	TMA-NX4-RSI-01-202107	01	07/2021	4 of 4